



Grounding Instructions for Keypad EZ Locks — *Important! Please read this first!*

Use these instructions to properly ground the Keypad EZ Lock.

Caution: Avoiding these instructions may leave the lock susceptible to electro-static discharges (ESD). Lock failure may result.

For cylindrical Keypad EZ Locks

- 1 Before tightening the inside rose liner — Task 10 in the installation instructions — connect the free ground wire terminal to the top of the rose liner with the top through-bolt, as shown in Figure 1.

Caution: Do not dangle the inside escutcheon by the grounding wire.

- 2 Resume following the installation instructions.

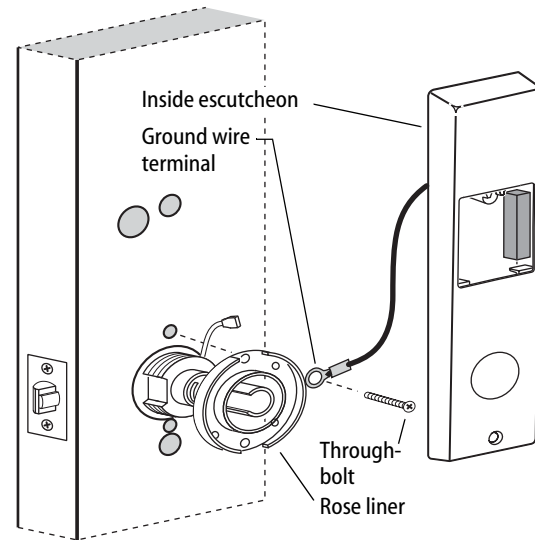


Figure 1 — Connecting the ground wire to the inside rose liner

For mortise Keypad EZ Locks

- 1 Before installing the inside mounting plate — Task 8 in the installation instructions — connect the free ground wire terminal to the top of the mounting plate with the through-bolt, as shown in Figure 2.

Caution: Do not dangle the inside escutcheon by the grounding wire.

- 2 Resume following the installation instructions.

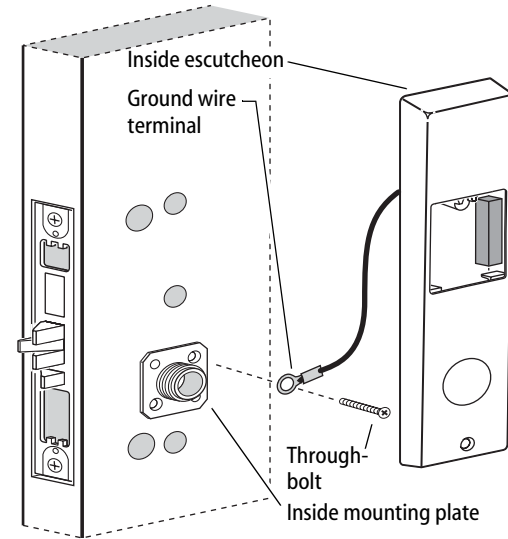


Figure 2 — Connecting the ground wire to the inside mounting plate

BEST ACCESS SYSTEMS

Indianapolis, Indiana